



## Parts Supplied

(one of each of the following)


- A. Plug
- B. Hollow screw
- C. Waste grating
- D. Grating washer
- E. Ribbed washer
- F. Waste body
- G. Overflow pipe
- H. Operating cable
- I. Overflow body
- J. Flat washer
- K. Overflow face
- L. Control knob
- M. Grub screw

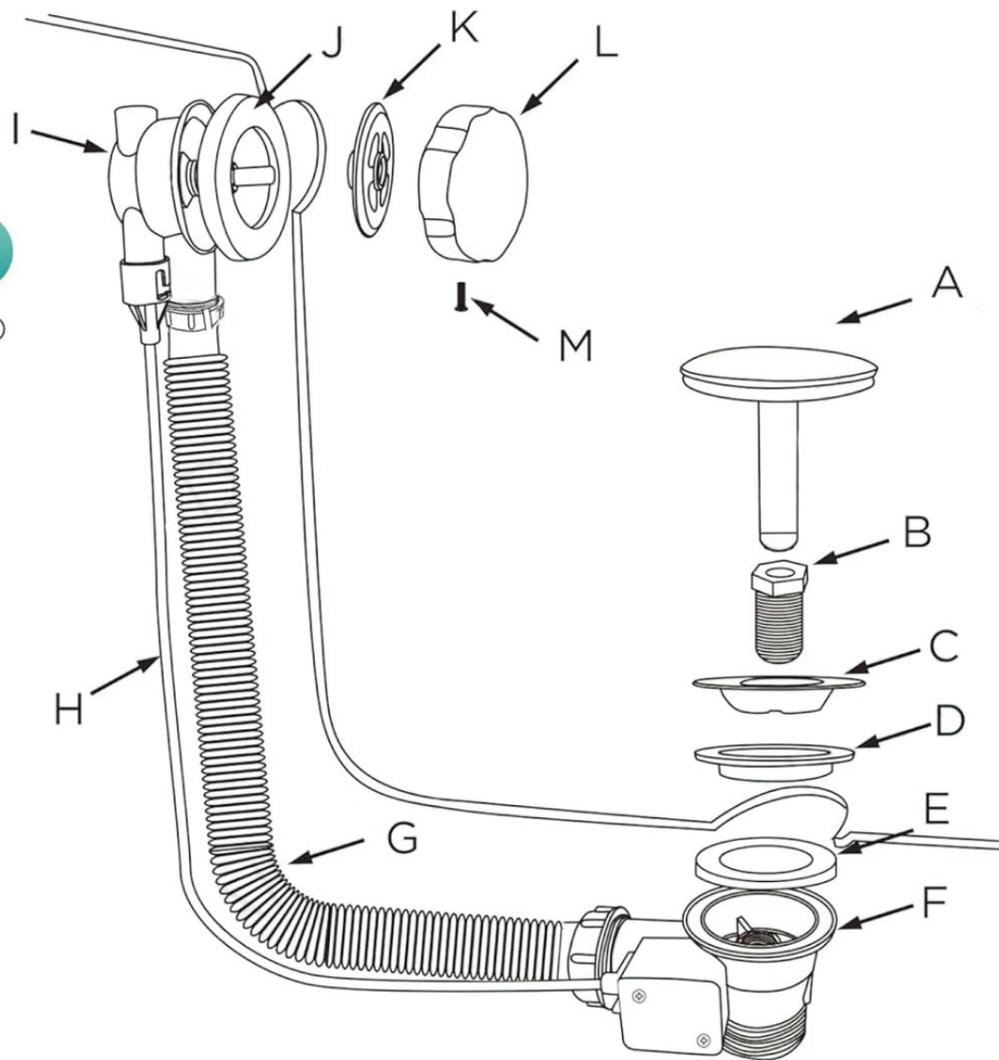


## Bath Waste & Overflow Installation Manual

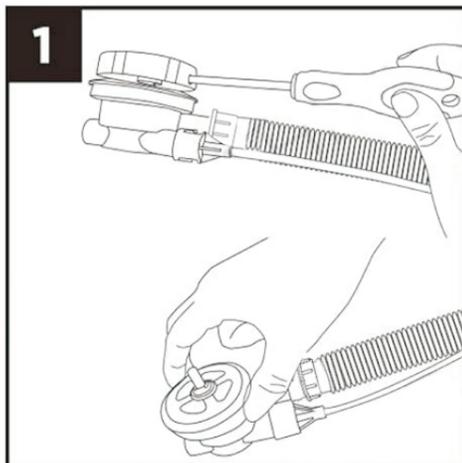


1. Loosen grub screw, remove control knob, and unscrew overflow face.

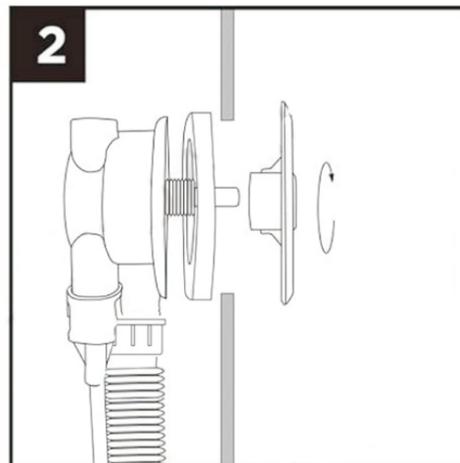


2. Put on the overflow body and flat washer (outside of the bathtub), screw on the Overflow face (inside of the bathtub).

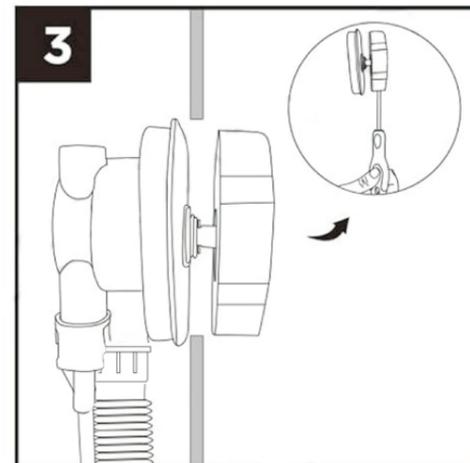


3. Place the control knob and tighten the grub screw on the side.

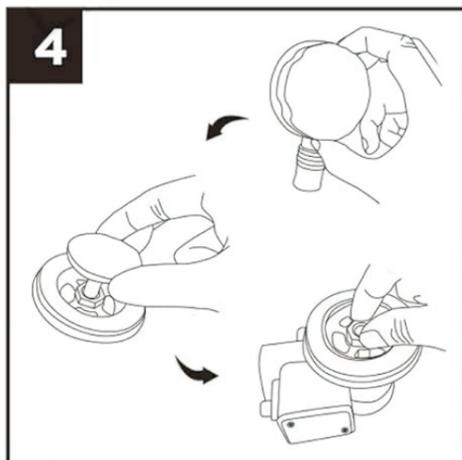

4. Rotate the control knob, pop out the plug and remove it, then unscrew the hollow screw.

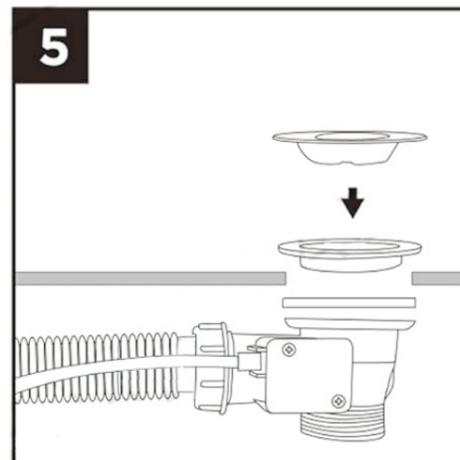

5. Put on the waste body and ribbed washer (outside the bathtub), then put on the waste grating and grating washer (outside of bathtub) in turn.

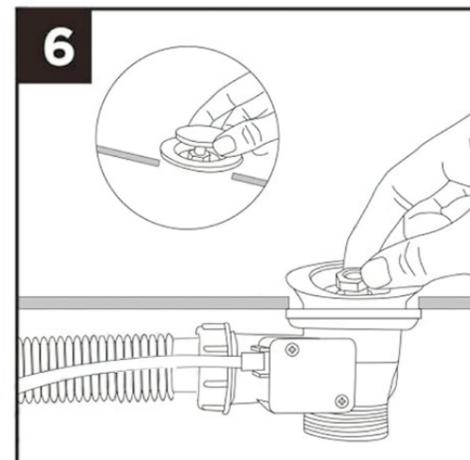

6. Screw on the hollow screw and reinsert the plug